

# John Deere Gator

“TS, TX, TH, TE Series” Sunshade

Part# FAS-DCGT

Part# FAH-DCGT

## Mounting Instructions

### Bracket & Hardware

#### Components


- Qty - (2) Uprights (Universal)
- Qty - (2) Mounting Tubes (40")
- Qty - (2) Mounting Plates
- Qty - (1) Flat steel strap
- Qty - (1) 34.5" Threaded Rod
- Qty - (2) 2" U-bolts
- Qty - (6) 1/2" serrated flange nut
- Qty - (2) Strap bolt
- Qty - (2) Strap Nut
- Qty - (2) Strap washer
- Qty - (4) 2-1/4" Hex Cap Bolt
- Qty - (4) 3/8" Serrated Flange Nut
- Qty - (8) 3/8" Flat Washers
- Qty - (4) 3/8" x 1-1/2" Rubber Isolator Pad
- Qty - (4) 3/8" Neoprene Washers
- Qty - (4) 3/8" Nylock Nuts
- Qty - (2) Amber Reflectors
- Qty - (2) Red Reflectors

**TOOLS REQUIRED:** Ratchet with 9/16" & 3/4" sockets, 9/16" & 3/4" wrenches, Tape measure, Electric drill 3/8" drill bit, and a Level



**STEP 1:** Position either upright and insert U-bolt. Loosely attach flange nuts. Repeat on other side.

**STEP2:** Thread (1) flange nut to threaded rod end and feed through completely under Gator. Insert through other upright bottom hole and attach flange nut.

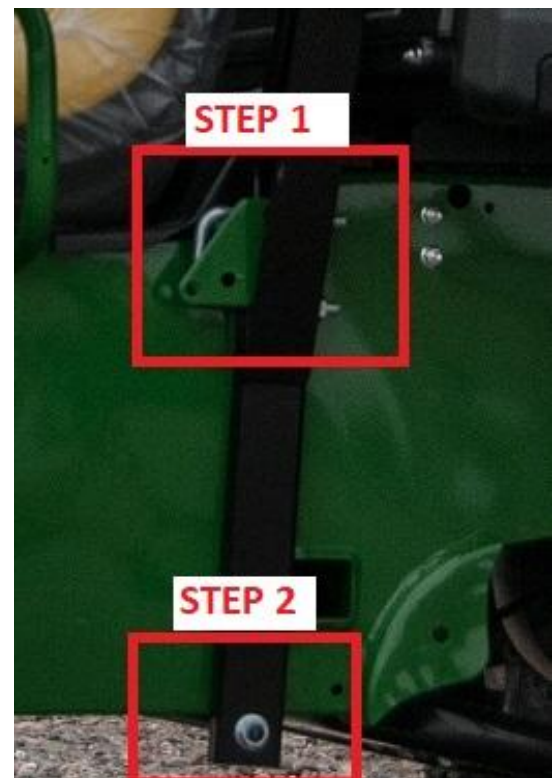

# John Deere Gator

## "TS, TX, TH, TE Series" Sunshade


Part# FAS-DCDT Part# FAH-DCGT

**STEP 3:** Loosely attach upright side plates using the 2" x 1/2" bolts on the inside of each upright and level.


**STEP 4:** Attach tubes with enclosed 2" - 1/4" bolts to the inside of each side plate, extending forward. Re-level tubes and tighten all nuts.

**STEP 5:** Attach 39" - 3/4" cross strap. **IMPORTANT:** Strap must be positioned as per diagram, and attaching bolts must be inserted from outside with the nuts coming from the inside.

**STEP 6:** Set canopy onto tubes and center. Starting with one rear corner, drill a 3/8" hole from below, up through canopy, using the pre-drilled tube holes as a guide. With flat washer in place, run 2"-3/4" bolt up through tube. Insert 1"-1/2" x 3/8" rubber isolator pad on bolt positioned between tube and canopy underside. Run bolt through canopy, insert rubber-backed washer and loosely tighten with 3/8" Nylock nut. Repeat by attaching the other rear side second; then the two front mounts.

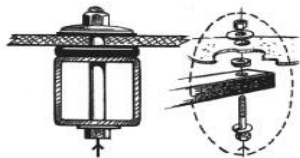

**STEP 7:** Tighten down all 4 sunshade bolts. **IMPORTANT:** Do NOT overtighten. Only secure enough to slightly "bulge" the rubber isolator pad with the nylock nut fully on thread

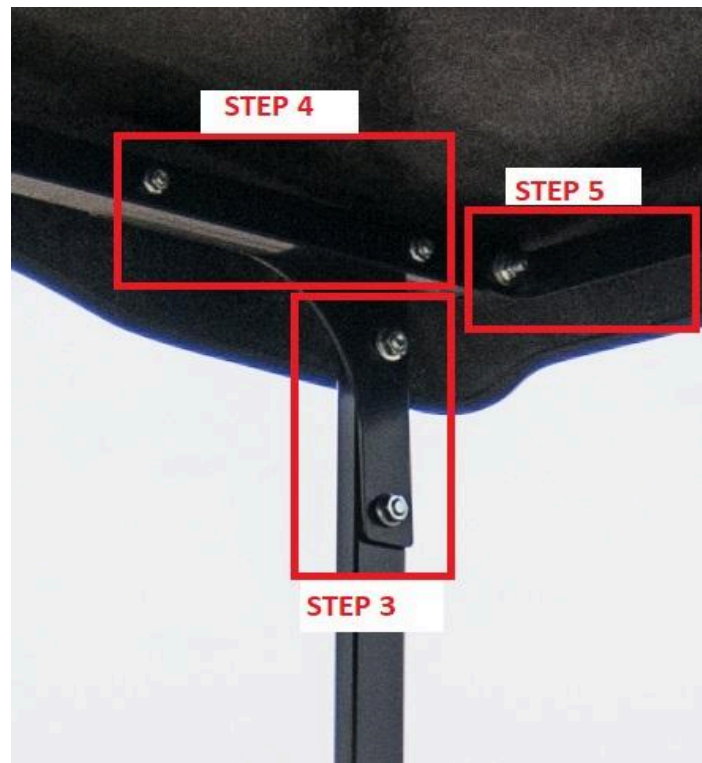

**\*\*\*SUNSHADE INSTALLATION COMPLETE\*\*\***

TRACTOR SUNSHADE  
6010 N 53rd Dr  
Glendale AZ, 85301



# John Deere Gator

“TS, TX, TH, TE Series” Sunshade

Part# FAS-DCDT Part# FAH-DCGT



TRACTOR SUNSHADE  
6010 N 53rd Dr  
Glendale AZ, 85301

Phone: 623-934-9340 Email: [info@tractorsunshade.com](mailto:info@tractorsunshade.com) Website: [tractorsunshade.com](http://tractorsunshade.com)