


## MOUNTING INSTRUCTIONS

### Assembled Bracket & Hardware Components

- Qty - (2) Mounting Plates
- Qty - (2) 40" Mounting Tubes
- Qty - (8) 1/2" Serrated Flange Nuts
- Qty - (4) 2-3/4" Hex Cap Bolts
- Qty - (4) 3/8" Flat Washers
- Qty - (4) 3/8" x 1-1/2" Rubber Isolator Pad
- Qty - (4) 3/8" Neoprene Washers
- Qty - (4) 3/8" Nylock Nuts
- Qty - (2) Amber Reflectors
- Qty - (2) Red Reflectors

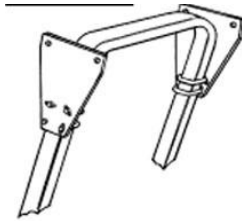

### Unassembled Bracket & Hardware Components

- Qty - (2) Mounting Plates
- Qty - (2) 40" Mounting Tubes
- Qty - (8) 1/2" Serrated Flange Nuts
- Qty - (4) 2-3/4" Hex Cap Bolts
- Qty - (4) 2-1/4" Hex Cap Bolt *\*\*\*Bracket Assembly\*\*\**
- Qty - (4) 3/8" Serrated Flange Nut *\*\*\*Bracket Assembly\*\*\**
- Qty - (8) 3/8" Flat Washers *\*\*\* Bracket Assembly\*\*\**
- Qty - (4) 3/8" x 1-1/2" Rubber Isolator Pad
- Qty - (4) 3/8" Neoprene Washers
- Qty - (4) 3/8" Nylock Nuts
- Qty - (2) Amber Reflectors
- Qty - (2) Red Reflectors

### Step 1: Mount side plates/Tubes (see diagram)

- **Important:** The lower round hole must always be towards the front.
- **Important:** Mounting Tubes positioned on the inside of the Mounting Plates



**Step 2:** Apply bracket assembly to ROPS using U-bolts & 1/2" serrated flange nuts supplied in hardware kit.

**Step 3:** Level bracket assembly even with the top of the ROPS, side-to-side, and parallel to tractor frame

**Step 4:** Mount Loosely, the (8) - 1/2" serrated flange nuts to allow for adjustment in step 5

**Step 5:** Place sunshade onto tubes and level. Stand off from front of tractor and visually check front edge level to rear.

**Step 6:** Sunshade leveling complete, Securely tighten the (8) - 1/2" serrated flange nuts.

**Step 7:** With sunshade positioned full forward, centered side to side.

TRACTOR SUNSHADE  
6010 N 53rd Dr  
Glendale AZ, 85301



## JOHN DEERE "PROGATOR"


Part# FAS-DCPRO (Sunshade)

Part# FAH-DCPRO (Bracket/Hardware)

**Step 8:** Starting in either rear corner. Using rear tube hole as a guide, drill a  $\frac{3}{8}$ " hole through sunshade letting the drill do the work. IMPORTANT: Do not force drill through the fiberglass sunshade.

**Step 9:** Assemble mounting hardware loosely from the bottom of the tube through the top of canopy.

- Qty - (4) 2- $\frac{3}{4}$ " Hex Cap Bolts
- Qty - (4)  $\frac{3}{8}$ " Flat Washers
- Qty - (4)  $\frac{3}{8}$ " x 1- $\frac{1}{2}$ " Rubber Isolator Pad
- Qty - (4)  $\frac{3}{8}$ " Neoprene Washers
- Qty - (4)  $\frac{3}{8}$ " Nylock Nuts

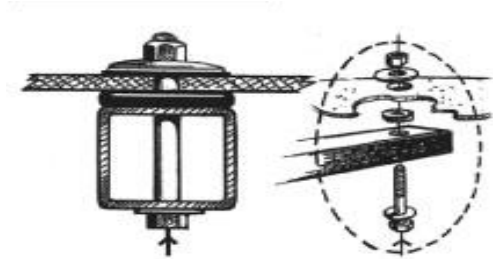

**Step 10:** Confirm sunshade positioning and continue onto the other rear corner.

**Step 11:** Finish with the 2 front mounting points and then finish up by securing all four corners.

IMPORTANT: Do NOT overtighten Sunshade bolts. The mounts are designed to "float" on rubber. Only secure enough to slightly "bulge" the rubber isolator pad with the nylock nut fully on threads.



TRACTOR SUNSHADE  
6010 N 53rd Dr  
Glendale AZ, 85301

Phone: 623-934-9340 Email: [info@tractorsunshade.com](mailto:info@tractorsunshade.com) Website: [tractorsunshade.com](http://tractorsunshade.com)